

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	<p>Warning-To reduce the risk of injury, user must read instructions manual carefully.</p>
	<p>CORRECT DISPOSAL</p> <p>This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices</p>
	<p>To minimize hazards to health and the environment at the end of this product's life , laws dealing with Waste Electrical and Electronic Equipment (WEEE) and The Waste Battery Directive require you to dispose of this product at a suitable collection facility where it will be sent in order to remove the batteries and for appropriate recycling. Please contact your local authorities for more details on recycling and safe disposal of these in your area.</p>
	<p>Compliance is a EC & UK security certification.</p>



WARNING

Move away from any potential source of ignition immediately if the battery leaks or emits an unusual odor. When you notice unusual smell, heat, discoloration, deformation, or any other unusual situations in the process of using, charging, or storing batteries, you should immediately remove them from the device or charger and stop using them.

IMPORTANT SAFEGUARDS

Thank you for using this product. In order to make sure that you can operate the machine correctly, read this instruction carefully before operation and keep it properly for future reference. Please be sure to read the precautions and safety rules on this page to ensure your safe use.

This manual will outline safety warnings and precautions, operating, maintenance and cleaning. The warnings and instructions reviewed in this manual cannot cover all possible conditions and situations that may occur. Caution and common sense are not built into this product, since we believe that the users will comply with these codes. If you have any problems, please call us. Do not try to fix the problems yourself, or it will cause injury or property damage.

Please read ALL the instructions before using your machine.

1. If the battery is low, please charge it in time.
2. Do not let children, minors, and pets get close to or touch the machine.
3. Do not immerse the appliance in water or any other liquid.
4. Do not disassemble the product.
5. Using any accessories or attachments that are not provided or recommended by the manufacturer may cause injury.
6. If the machine is not to be used for a long period of time, remove the pagers. Do not use other adapters than the included AC adapter.
7. Do not leave the product hanging over the edge of table or counter or let it come into contact with any hot surfaces.

8. Do not place the product on or near hot air, electric burners or heaters.
9. Do not apply this unit to any other purposes than the indicated usage.
10. KEEP IT OUT OF CHILDREN'S REACH.
11. DO NOT CLEAN IT WITH ANY ABRASIVE MATERIAL.
12. Please clean it regularly, at least once a month.
13. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safe.

FCC INFORMATION

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2) This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the distance between the product and receiver.
- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

PRODUCT PARAMETERS

Model	YY-F100-433
Working frequency	433MHZ(ASK)
Modulation	OOK AM
Power adapter In put	AC100-240V 50/60Hz
Power adapter Out Put	DC9V 1A
Pagers	16PCS+ 1PCS (Free gift)


BEFORE USING

1. Before using the appliance for the first time, peel off any promotional and packaging materials and check that the product is clean and dust-free.
2. Please dispose of all plastic bags carefully and keep them away from children and pets.
3. Check all components provided according to the list in this manual. Make sure you have all of the parts listed.

ABOUT SIGNAL INTERFERENCE

Each transmitter is given a unique host number when produced, so even if nearby shops use the same product, it won't cause signal interference. But when transmitters from close stores share the same host number, signal interference may occur. In this case, changing the host number of either transmitter can help, but all its receivers should be re-registered to the transmitter.

EXTENSION STATEMENT

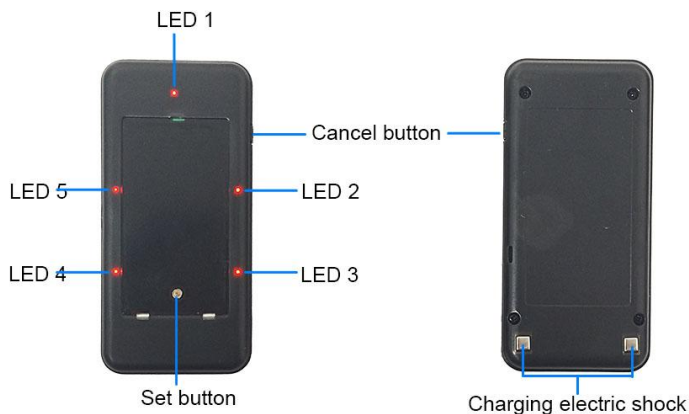

CHARGING THE RECEIVER

1. Insert the receiver down into the charging slot with its charging contacts facing backward.
2. After the receiver is inserted, LED 1 lights up and the receiver starts charging. (When plugged in, the receiver is automatically switched on.)

REGISTERING THE RECEIVER ID

1. Remove the pager number holder and the pager ID card.
2. Hold the CANCEL button and press the setting button (the yellow metal button) until LED 2 and 3 light up. (When LED 2 and 3 are on, it means that

the receiver has entered standby mode.)

Note:

The setting button can be difficult to press with fingers alone. To press the button, you can use a small object such as a paperclip or a ballpoint pen tip.

3. Enter the ID number (1~98) through the keypad. (You can't register 99.)
4. Press the CALL button after entering the number, and the receiver will beep, flash and vibrate, which means that the pager is successfully programmed with the desired ID number. And then press the CANCEL button to stop it from beeping, flashing and vibrating.
5. After the programming, LED 2 and LED 3 go out, and LED 1 begins flashing. (When LED 1 flashes, it means that the receiver has entered standby mode.)
6. Place the pager ID card and its holder back onto the receiver.

SETTING THE CALLING MODE OF THE RECEIVER

1. Remove the pager number holder and the pager ID card.
2. Press the setting button to enter the setting mode.
3. Press the setting button until the number of LED lights that are on is in accordance with the desired calling mode. (Please refer to the following chart.)
4. Choose any calling mode and press the CANCEL button. (If the CANCEL button is not pressed, the calling mode setting will be automatically completed after a few seconds.)
5. Place the pager ID card and its holder back onto the receiver.

The number of powered-on LED lights	0	1	2	3	4	5
Paging duration	40s	8s	16s	24s	32s	40s
Beep	NO	YES				
Vibrate	YES					
Flash	YES					

OPERATING METHODS

1. Giving pagers

When the pager is removed from the charging base, all LED will go out and enter receiving mode. Please confirm the pager ID and give it to the guest.

Note:

- Pagers can go into service after 40 minutes of charging. (A full charge takes 4 hours.)
- If the battery of the pager is low, it won't respond to the call of the transmitter.
- Since the pager is unable to show its remaining battery level, please give a charged pager to the guest.

2. Calling pagers

- Input the pager ID of the receiver to be called on the keypad and press the CALL button.
 - The call can be stopped by pressing the CANCEL button on the receiver.
 - Retrieving pagers and putting them back onto the charging base
- The beep will stop after the pager is plugged back to the transmitter.

Note:

- The receiver can not respond to the call when charging.

3. Turn On/Off

- Put the extension back on the charging base, Type 99 and press the CALL button to turn it off.
- Put the extension back on the charging base and replug it into the power supply to turn it on.

ADDING ADDITIONAL RECEIVERS

To add additional receivers, it is necessary to purchase extra receivers and transmitters. If you need to use more than 10 receivers, or if you want to use two or more transmitters, please follow the procedures below to add them. For example, add another transmitter (Transmitter B) to the transmitter that is already in service (Transmitter A).

1. Confirming the host number of Transmitter A

a. Keep pressing the "Delete" button right after connecting Transmitter A to

electricity, until the host number appears on the number display. (Generally speaking, the host number will appear after pressing the “Delete” button for 3~5 times. And note that if Transmitter A has been connected to the power supply for some time, the host number will fail to appear.)

b.The display screen will show the host number of Transmitter A. Please write it down.

Note:

- Please be careful not to change the host number. Otherwise, all receivers need to be re-registered to the transmitter.
- If the host number is accidentally changed, restoring it back to the original one can re-register all receivers to the transmitter.

c. Press the “Call” button to return to the standby screen(--).

2. Changing the host number of Transmitter B

a.Keep pressing the “Delete” button right after connecting Transmitter A to the power supply, until the host number appears on the number display.

b.Input the host number of Transmitter A and press the “Call” button.

Registering the pager ID of additional receivers

Please refer to the “Registering the receiver ID”.

TROUBLESHOOTING

Attention: Please don’t disassemble or repair the device if you are not a qualified technician.

Scenarios	Problems	Solutions
Having pressed the keypad area, the transmitter has no response OR the number display shows nothing	The AC adapter is not plugged.	Please plug the AC adapter into the socket.
	The power connector is not connected to the transmitter.	Please connect the power connector to the transmitter.
	The power cord of the AC adapter is broken.	Please inquire customer service staff for assistance.
	The keypad area is stained.	Please wipe off the stain with a soft dry cloth.
The receiver can’t	The receiver has a	Please insert it into the

respond to the call.	low battery level.	transmitter for charging. (40 minutes of charging can enable it to be ready for use.)
	The receiver is out of its working distance.	The receiver has a reception range of approximately 500 meters in an open area.
	Walls or metal (like cars) can block the signal sent from the transmitter to the receiver.	The thickness and material of walls may weaken the signal. Also, in an enclosed spaces made of metal, the radio waves may have difficulty reaching the receiver. Both of the circumstances may impair the working distance of the receiver. Please reduce your distance from the transmitter. (It may be possible to receive signals by opening the car window.)
	The host number of the transmitter is changed.	If the receivers have been paired with the transmitter, changing the host number of the transmitter will disconnect them from each other. Please re-register all receivers to the transmitter, or restore the host number.
The receivers can't be charged	The charging contacts are dirty.	Please wipe off the dirt with a soft dry cloth.
	There are foreign objects in the charging slot.	Please clean out the charging slot.
The receivers can vibrate and flash, but	The calling mode is set at "No Sound	Please alter the calling mode.

fail to beep.	Mode”.	
---------------	--------	--

CLEANING AND STORAGE

1. If the machine is not to be used for a long period of time, Remove power, clean and cover it and store it in a dry and safe place.
2. Wipe with a soft, dry cloth. Be sure to keep the product dry
3. Please put the pager and host together.